



Desiccant Dryer Replacement Instructions

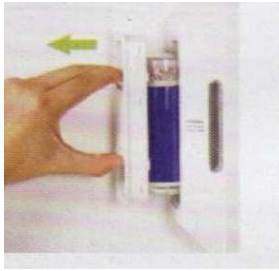

Step 1: Remove the Assembly

- Squeeze the two slides together on the door/tray located on the left side of the unit and pull the dryer assembly out.

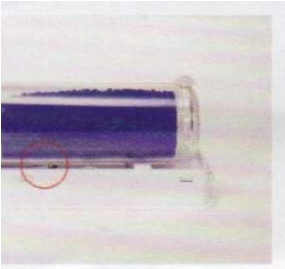


Step 2: Depress the Locking Tab

- Use a small flathead screwdriver, or another thin and stiff-bladed tool, to depress the locking tab on the inside of the desiccant dryer door under the cartridge.

Step 3: Remove the Cartridge

- Continue holding the locking tab down and slide the desiccant dryer cartridge upwards to remove it from the desiccant dryer door.

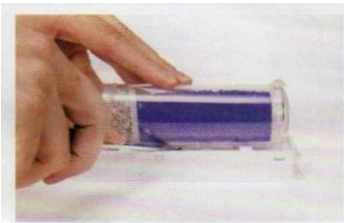

Step 4: Install the New Cartridge

- Install a new cartridge filled with blue beads on the desiccant dryer door.



Step 5: Reinstall the Door

- Ensure that the small gasket is in place on the outlet of the cartridge and reinstall the desiccant dryer door into the unit.

Step 6: Purchase Additional Parts

- To purchase additional cartridges, call Customer Service or visit greentechpurifiers.com.

Replacement Frequency

- The frequency for changing the desiccant dryer cartridge will vary depending upon several factors, including the amount of use of the machine and the level of humidity.